




## Pre-setting and montage of coupler C2

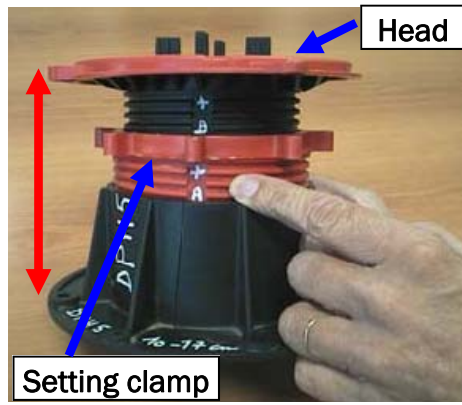


**DPH5 pedestal (height adjustable from 100 to 170 mm)**

For example: Pre-setting for a height of 14 cm

The setting clamp will be screwed in the base of the pedestal until only the letter A is to be seen.


The head will be screwed in the base of the pedestal until only the letter B is to be seen over the setting clamp and right over the letter A. The height of the pedestal is now exact 14 cm.

### Montage of the coupler between head and base of the pedestal

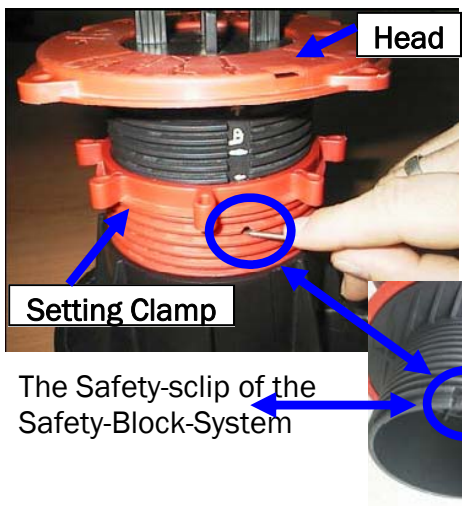

- Screw out the head of the pedestal until the safety-block-system is reached.
- In order to take out the head use a nail to release the safety-clip. Just press the nail into the small hole and screw in the same time the head out of the pedestal.
- After that the coupler C2 can be screwed into the setting clamp and the head into the coupler.
- Further couplers will be screwed in the DPH5 in the same way.
- To unscrew of all parts the safety-clip must be released at all items before.

The Safety-sclip of the Safety-Block-System

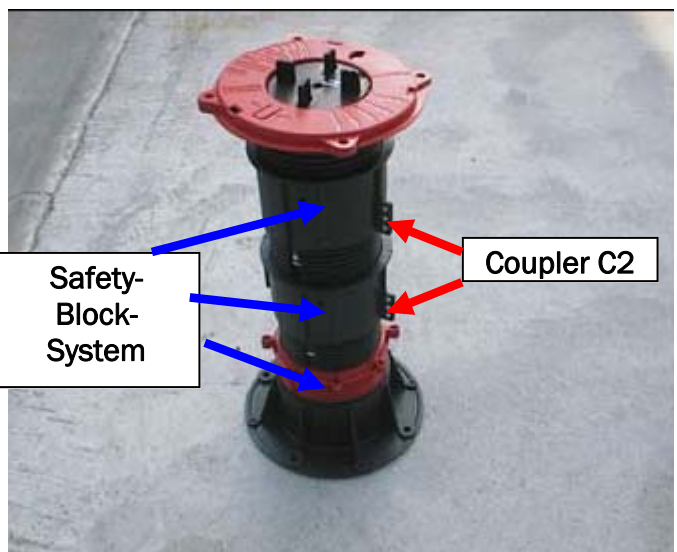

With couplers adjustable in their heights from 170 mm to 620 mm

- 1 coupler = 170 to 290 mm
- 2 couplers = 240 to 400 mm
- 3 couplers = 320 to 520 mm
- 4 couplers = 390 to 620 mm



Here you see the small hole at the coupler where the nail must be pushed in to release the safety-clip of the safety-block-system in order to unscrew the coupler from the DPH5 pedestal.